



SERVICE PARTS AND PRICES—Continued

Cat. No.	Description	Price	Cat. No.	Description	Price
60343	Control rod cotter pin.....	.05	66209	Terminal screw inner insulating block10
66361	Distributor grounding wire.....	.30	66944	Terminal screw insulating bushing10
66362	Grounding wire fastening screw to engine front plate, 10-32-1/4"05	69254	Terminal screw brass washer—square hole...	.05
71521	Cable bracket15	1288	Terminal screw lock washer05
66575	Metal dash plate (Furnished on request only)	.35	67138	Terminal screw hexagon nut05
66420	High tension cable-hook and free 20 1/2" long (2)40	60070	Terminal nut05
66419	High tension cable-hook and free 22" long ..	.45	67270	Condenser—complete	2.00
66427	High tension cable-hook and free 24 1/2"45	67271	Condenser fastening rivet05
69677	High tension cable-free and free 25 1/2" long ..	.25	72258	Distributor shaft with governor and cam....	3.50
66422	Low tension cable loop and loop 28 1/2" long..	.35	70890	Interrupter cam	1.50
Type T-4208 Ignition Distributor Parts			68165	Interrupter cam spring ring05
73152	Distributor housing with holding springs.....	3.00	65687	Distributor rotor with insert70
70823	Distributor plate holding spring15	66696	Distributor rotor insert05
69302	Distributor plate holding spring rivet05	463	Distributor rotor insert fastening screw05
66102	Distributor shaft felt wick05	66880	Distributor block with center brush	2.50
70347	Distributor shaft oil cup15	65936	Distributor block terminals02
66964	Interrupter housing with condenser and interrupter	5.25	64759	Distributor block center brush and spring ..	.25
65649	Interrupter housing with riveted parts—only..	.90	64757	Distributor block center brush spring ring ..	.05
65142	Interrupter lever pivot post with insulating plate15	65620	Distributor block holding spring15
65889	Pivot post insulating plate rivet.....	.05	66223	Distributor block holding spring rivet05
66786	Interrupter lever with contact point.....	.85	66423	Control arm with screw80
65772	Interrupter lever spring clip05	65619	Control arm screw05
65650	Interrupter lever operating spring05	66321	Distributor gear60
65626	Interrupter lever lead to terminal05	66324	Distributor gear dowel pin05
66047	Contact screw with nut—long50	66322	Distributor gear spring ring05
438	Contact screw nut05	66774	Distributor shaft felt washer05
65627	Interrupter housing insulated terminal screw ..	.25	66314	Distributor shaft collar15
			66315	Distributor shaft collar set screw05
			68234	Adjusting wrench for distributor10
			Type TC-30 Ignition Coil Parts		
			69478	Terminal screw05
			762	Terminal screw plain washer05
			65936	Terminal clip02