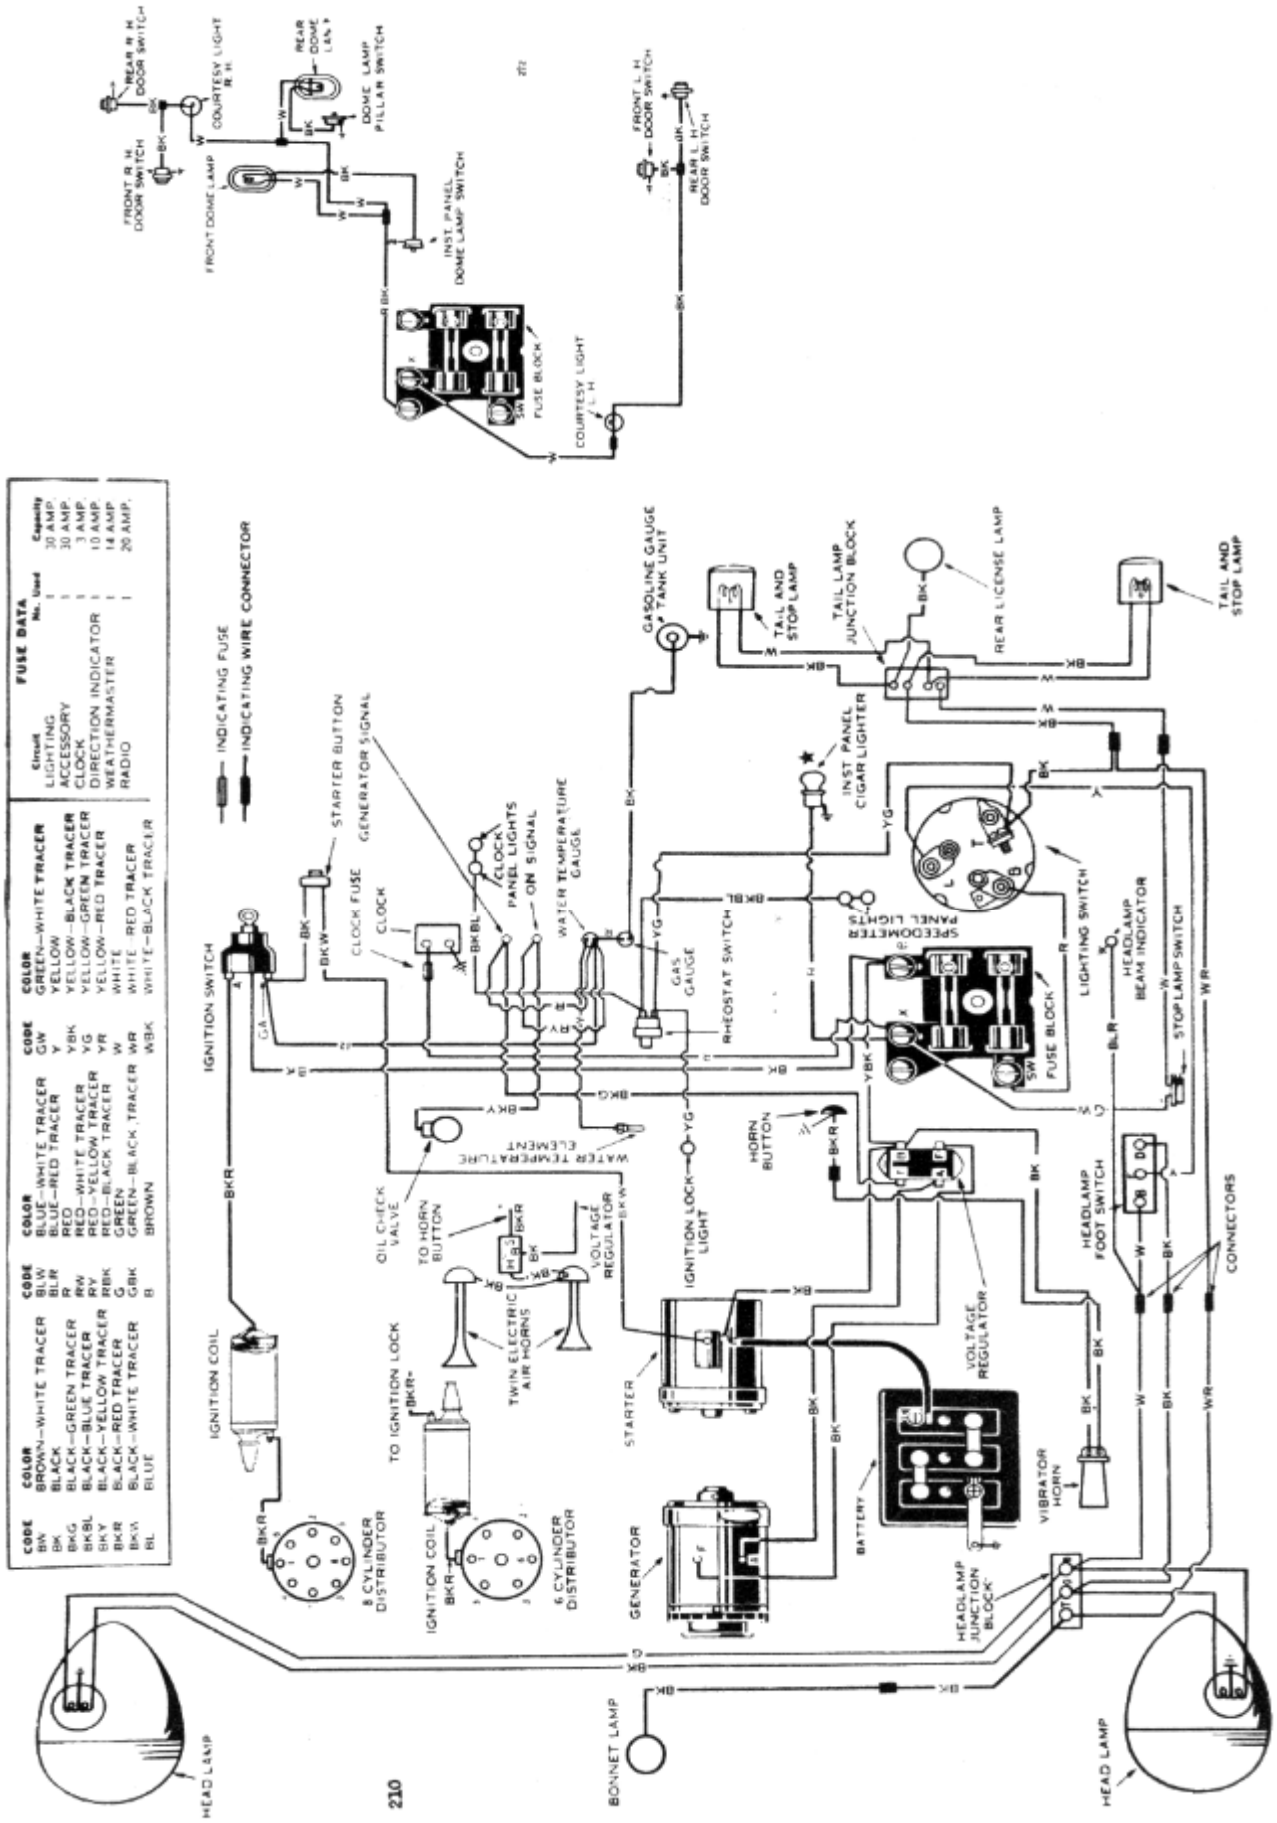
FUSE DATA
Circuit | No. Used | Capacity
LIGHTING | 1 | 30 AMP.
ACCESSORY | 1 | 30 AMP.
CLOCK | 1 | 3 AMP.
DIRECTION INDICATOR | 1 | 10 AMP.
WEATHERMASTER | 1 | 14 AMP.
RADIO | 1 | 20 AMP.
CODE | COLOR | CODE | COLOR | CODE | COLOR
BW | BROWN—WHITE TRACER | BLW | BLUE—WHITE TRACER | GW | GREEN—WHITE TRACER
BK | BLACK | BLR | BLUE—RED TRACER | Y | YELLOW
BKG | BLACK—GREEN TRACER | R | RED | YBK | YELLOW—BLACK TRACER
BKBL | BLACK—BLUE TRACER | RW | RED—WHITE TRACER | YG | YELLOW—GREEN TRACER
BKY | BLACK—YELLOW TRACER | RY | RED—YELLOW TRACER | YR | YELLOW—RED TRACER
BKR | BLACK—RED TRACER | RBK | RED—BLACK TRACER | W | WHITE
BKW | BLACK—WHITE TRACER | G | GREEN | WR | WHITE—RED TRACER
BL | BLUE | GBK | GREEN—BLACK TRACER | WBK | WHITE—BLACK TRACER
B | BROWN
INDICATING FUSE
INDICATING WIRE CONNECTOR
IGNITION SWITCH
STARTER BUTTON
GENERATOR SIGNAL
CLOCK FUSE
CLOCK
CLOCK
PANEL LIGHTS
ON SIGNAL
WATER TEMPERATURE GAUGE
GAS GAUGE
RHEOSTAT SWITCH
GASOLINE GAUGE TANK UNIT
TAIL AND STOP LAMP
TAIL LAMP JUNCTION BLOCK
REAR LICENSE LAMP
TAIL AND STOP LAMP
INST PANEL CIGAR LIGHTER
SPEEDOMETER PANEL LIGHTS
LIGHTING SWITCH
HEADLAMP BEAM INDICATOR
STOP LAMP SWITCH
FUSE BLOCK
HORN BUTTON
WATER TEMPERATURE ELEMENT
OIL CHECK VALVE
TO HORN BUTTON
VOLTAGE REGULATOR
IGNITION LOCK LIGHT
HEADLAMP FOOT SWITCH
CONNECTORS
IGNITION COIL
TWIN ELECTRIC AIR HORNS
TO IGNITION LOCK
STARTER
VOLTAGE REGULATOR
BATTERY
VIBRATOR HORN
8 CYLINDER DISTRIBUTOR
IGNITION COIL
6 CYLINDER DISTRIBUTOR
GENERATOR
HEADLAMP JUNCTION BLOCK
HEAD LAMP
BONNET LAMP
HEAD LAMP